


WATER FILTER REMOVAL AND INSTALLATION INSTRUCTIONS **MODEL RS2**

INSTRUCTIONS

1. Using filter knob, turn the old filter ¼ turn counter clockwise and remove from refrigerator.
2. Remove new filter from packaging take off red cap.
3. With the label facing down, insert the new filter into the filter receptacle.
Turn the filter a ¼ turn clockwise so that the lock arrow is pointing up, and is aligned with arrow (See Illustration).
4. Run water from the dispenser for 5 minutes at 0.5 GPM (about 2½ gallons) to clear the system and prevent sputtering.
5. To reset the indicator light, press and hold the ICE type button and the CHILD LOCK button at the same time for 3 seconds.
6. Open the refrigerator door and check for leaks
7. Place the six-month replacement calendar label on inside of door

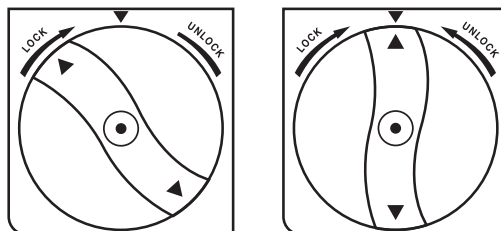

Protect filter cartridge from freezing.
Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system.

Cartridge Life : 300 US Gal (1,136L) or 6 months



Tested and certified by The Water Quality Association
to NSF/ANSI 53*, NSF/ANSI 42* and to CSA B483.1

* See performance data sheet for details

C

Envirogard Products Limited
446 Major Mackenzie Dr E, Richmond Hill, ON, L4C1J2, CANADA
Help Line : 1800 667 8072 Toronto & Area : (905) 884 9388
www.rainfresh.ca

© Copyright . Envirogard Products Limited . 2016 . All rights reserved


07/2016 . 803147



INSTRUCTIONS POUR INSTALLATION
ET RETRAIT DU FILTRE À EAU
MODÈLE RS2

INSTRUCTIONS

1. En utilisant le bouton du filtre, faire pivoter le filtre usagé d'un quart de tour dans le sens contraire aux aiguilles d'une montre et le retirer du réfrigérateur.
2. Retirer le nouveau filtre de l'emballage et retirer le bouchon rouge.
3. Avec l'étiquette face vers le bas, insérer le nouveau filtre dans le réceptacle de filtre. Faire pivoter le filtre d'un quart de tour dans le sens des aiguilles d'une montre pour que la flèche de verrouillage soit orientée vers le haut et alignée avec la flèche (voir l'illustration).
4. Faire couler l'eau du distributeur pendant 5 minutes à 0,5 GPM (environ 2½ gallons) afin de vider le système et éviter tout crachotement.
5. Pour réinitialiser le témoin lumineux, appuyer sur les boutons de type de glace et de VERROUILLAGE POUR ENFANT en même temps pendant 3 secondes.
6. Ouvrir la porte du réfrigérateur et s'assurer qu'il n'y a pas de fuites
7. Placer l'étiquette de calendrier de remplacement tous les six mois sur l'intérieur de la porte

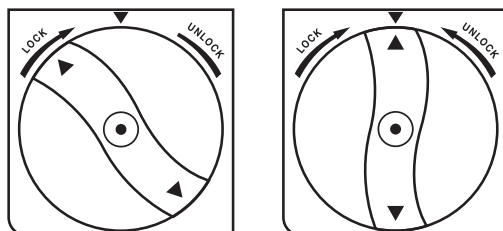

Protéger le filtre à eau contre le gel.

Si l'eau n'est pas saine du point de vue microbiologique ou que sa qualité est douteuse, une désinfection adéquate s'impose avant ou après le filtre.

Durée du filtre : 300 gallons (1136 L) ou 6 mois



Testé et certifié par Le Water Quality Association
NSF / ANSI 53*, NSF / ANSI 42* et CSA B483.1

* Voir la fiche de données de performance pour plus de détails

C

Envirogard Products Limited

446 Major Mackenzie Dr E, Richmond Hill, ON, L4C1J2, CANADA

Assistance-clients: 1800 667 8072 **Région de Toronto:** (905) 884 9388
www.rainfresh.ca